








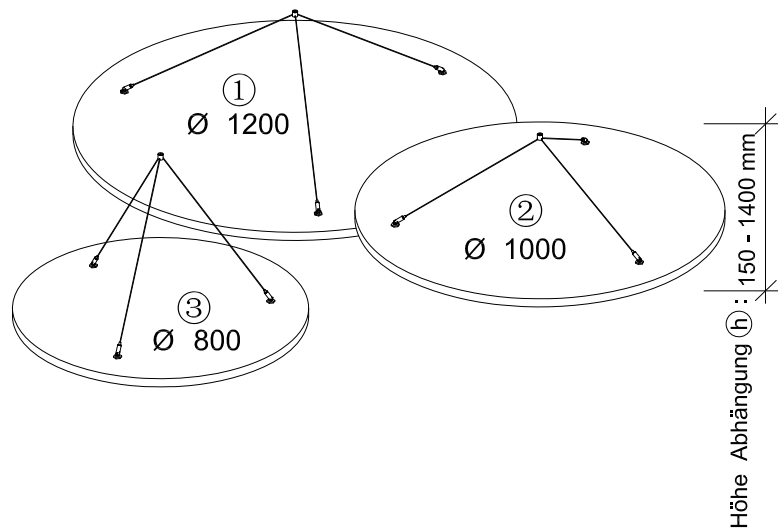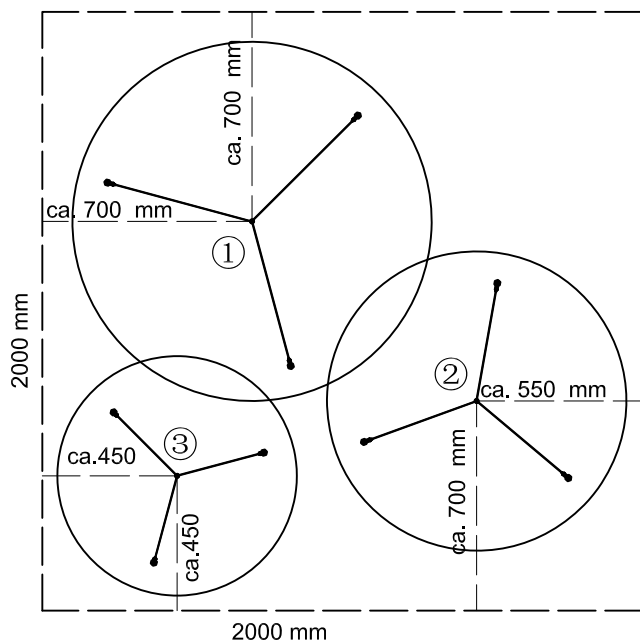

Montage-Beispiel:



* bei Dekor "W"
VADSRB1/ W


<p>9 x (A)</p>  <p>M5</p> <p>620240</p>	<p>3 x (B)</p>  <p>M12</p> <p>620239</p>	<p>9 x (C)</p>  <p>1,50 m</p> <p>620241</p>	<p>3 x (D)</p>  <p>Seko 4,5 x 40</p> <p>500236</p>	<p>3 x (E)</p>  <p>M8x 40</p> <p>500537</p>	<p>3 x (F)</p>  <p>13x 30</p> <p>622495</p>	<p>*1Paar (H)</p>  <p>622360 Handschuhe</p>
---	--	---	--	---	---	---

1 **Achtung:**
Bei Dekor "Weiss" auf Sauberkeit achten,
Handschuhe (H) benutzen!
VADSRB1/W



clean!


je 3 x (A)

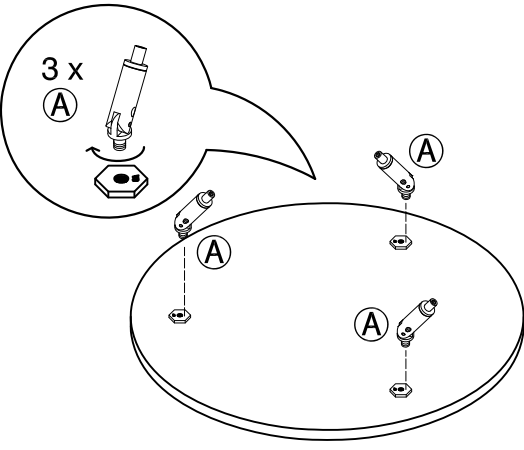

3 x (A)



620240

2

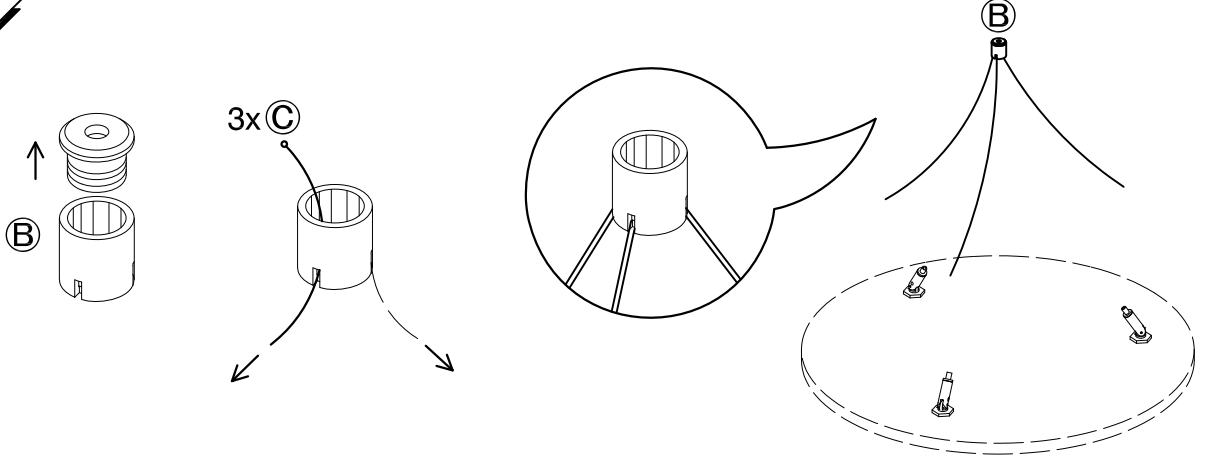


3x (C)

(B)

<p>je 1 x (B)</p>  <p>620239</p>
<p>je 3 x (C)</p>  <p>1,50 m 620241</p>

3



Montage - Beispiel:

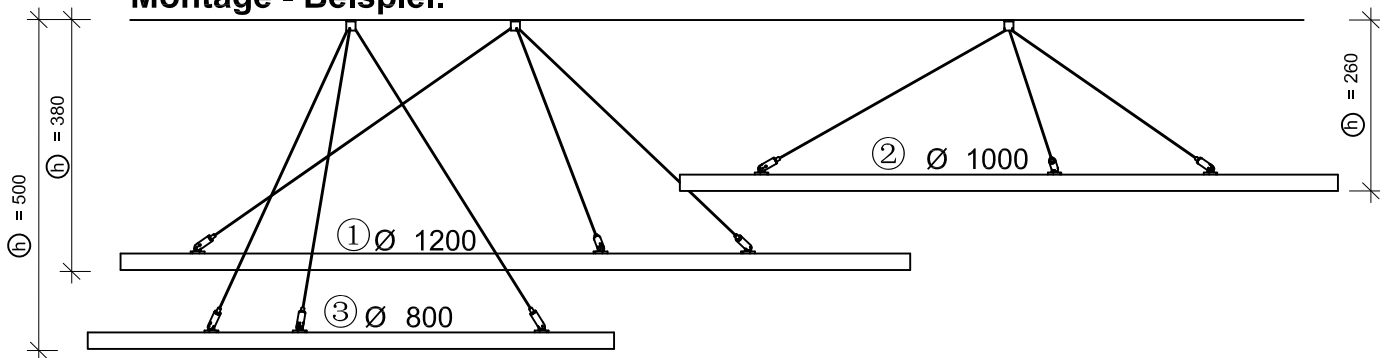



Beispiel:	Höhe: (h)	Rest: (a)
① Ø 1200	500 mm	850 mm
① Ø 1200	380 mm	917 mm
① Ø 1200	260 mm	970 mm

Beispiel:	Höhe: (h)	Rest: (a)
② Ø 1000	500 mm	920 mm
② Ø 1000	380 mm	1000 mm
② Ø 1000	260 mm	1060 mm

Beispiel:	Höhe: (h)	Rest: (a)
③ Ø 800	500 mm	980 mm
③ Ø 800	380 mm	1070 mm
③ Ø 800	260 mm	1150 mm

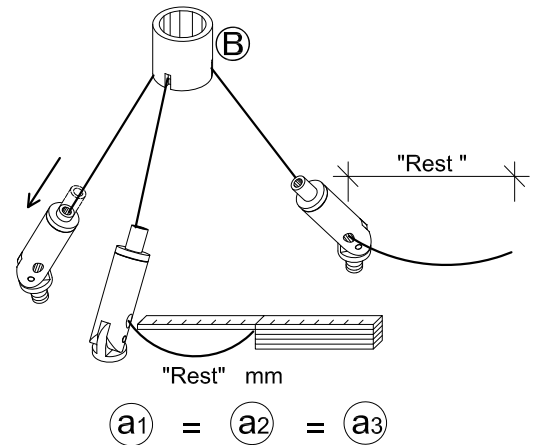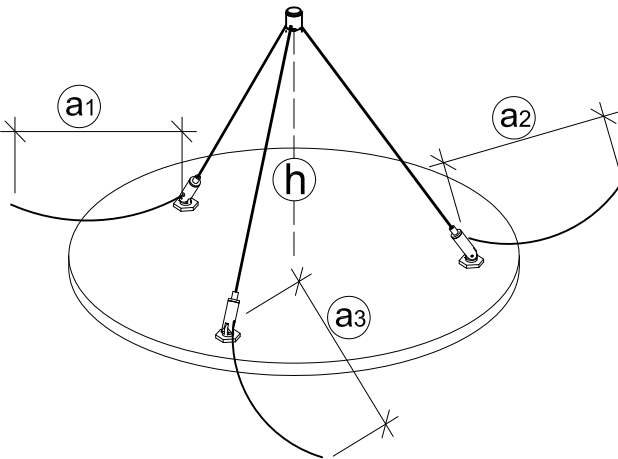



4

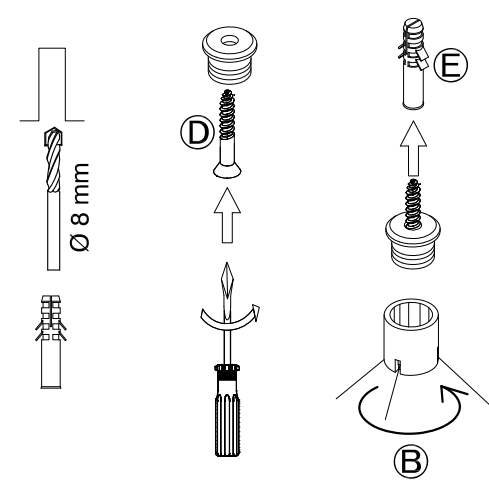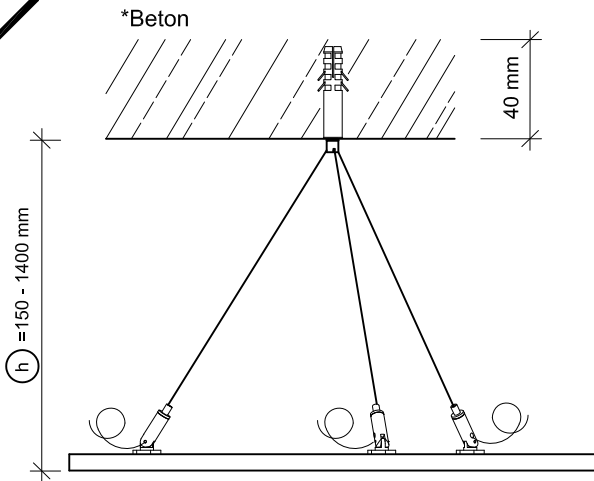

3 x (D)
4,5 x 40
500236

3 x (E)
M8x 40
500537

5

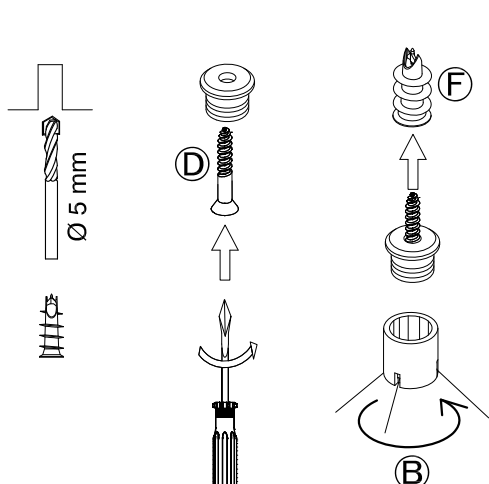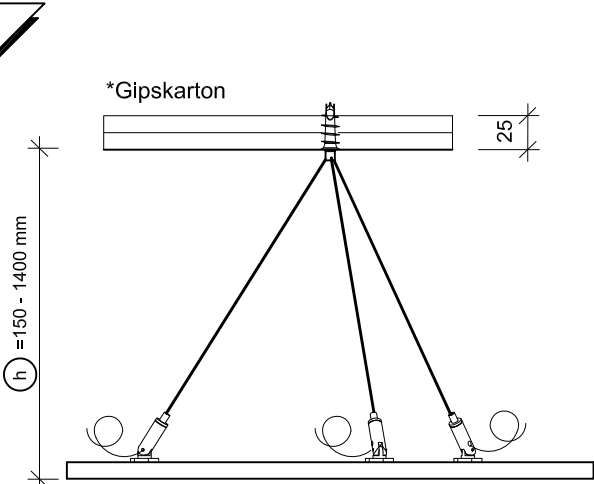

3 x (D)
4,5 x 40
500236

3 x (F)
13x 30
622495